



CONNECT TO
OUTPUT
RECEPTACLE ON
METERING UNIT



NOTE:

- 1) SELECT DUAL BANANA PLUG WITH DESIRED OUTPUT SCALING.
- 2) INSTALL PLUG IN BANANA JACK 1 FOR MAIN OUTPUT.
- 3) INSTALL PLUG IN BANANA JACK 2 FOR PE OUTPUT (OPTIONAL).
- 4) TAB ON DUAL BANANA PLUG INDICATES (-) SIDE OF PLUG.

SYM.	REVISION	DRN./DATE	CK'S/DATE	THIS DRAWING AND ALL INFORMATION CONTAINED HEREIN, IS THE PROPERTY OF DYNAMP LLC, AND MAY NOT BE COPIED, REPRODUCED NOR DIVULGED TO UNAUTHORIZED PERSONS WITHOUT THE EXPRESS WRITTEN CONSENT OF DYNAMP LLC. IT IS PROVIDED SOLELY FOR THE CONVENIENCE OF THE USER AND SHALL BE RETURNED UPON REQUEST.		B/M NO.(REF.)	THIRD ANGLE PROJECTION	DO NOT SCALE PRINT TOL. UNLESS OTHERWISE NOTED DEC. ±.015 FRACTION ±.015 ANG. ±.1°		TITLE
						FINISH		DRN./DATE RJM 07/24/17		SCALE
						MATL		APV./DATE N/A		
								JOB NO. PRELIMINARY DWG. NO. 83B109567		REV.
								DYNAMP, LLC GROVE CITY, OHIO		
								OUTLINE & MOUNTING LKLAT2P OUTPUT CABLE ASSEMBLY		